


WTXIR01

1. Apply Audio signal 400mVrms into Audio input L/R of the IR transmitter box.
2. Apply DC 12V into Power input (3. Red for DC 12V, 4. Black for ground).
3. Audio transmission frequency is 2.3MHz and 2.8MHz.

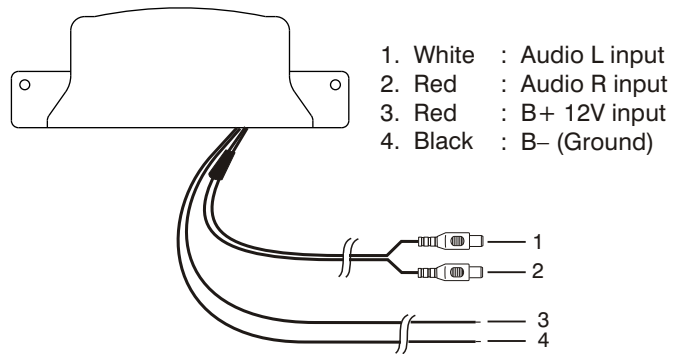

SIDE VIEW

