



# HEAVY DUTY

# JHD3630BT Quick Reference Guide

## Basic Operation

**MODE:** Continue to press to navigate through the following modes: AM/FM, \*SXM, \*iPod/USB, CD, BT Audio and AUX.

**POWER ON/OFF:** Push to turn ON. Push *and hold* to turn OFF. Rotate knob CLOCKWISE to INCREASE (+) VOLUME, and COUNTER-CLOCKWISE to DECREASE (-) VOLUME.

**AUDIO MENU:** Push to access menu. Push repeatedly to navigate through menu. When desired menu item, BASS, TREBLE, BALANCE (left to right), or FADER (front to back), is reached, adjust it by rotating knob.



**EQ/LOUD:** Press to choose one of the predefined bass and treble curves. Press *and hold* to turn loudness ON/OFF.

**MUTE:** Press to MUTE audio.

**AUXILIARY INPUT:** Insert stereo connector from any portable audio player or USB device.

**PTY/CAT MENU:** Press & hold to access SYSTEM MENU. Press << or >> to navigate through menu items. Press ENTER to adjust desired menu item.

**Setting Clock:** Press *and hold* to enter menu. Press << or >> to navigate to SET CLOCK. Press ENTER to select. Press << or >> to adjust the HOUR. Press ENTER to move to the MINUTES. Press << or >> to adjust the MINUTES. Press ENTER to set the clock.

## AM/FM/RBDS/WB Controls

**BAND:** Press to select preset group FM1, FM2, FM3, AM1, or AM2 each with 6 channel memory locations.

**WB:** Press & hold to listen to WEATHERBAND.

**VOLUME:** Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTER-CLOCKWISE to DECREASE (-) volume.



**AS/PS:** Press to SCAN through currently stored presets. Press *and hold* to STORE strongest broadcast stations in your area.

**MUTE:** Press to MUTE audio.

**STATION STORE BUTTONS:** Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 30 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

**TUNE/SEEK:** Momentarily press >> to tune UP in frequency or << to tune DOWN in frequency. Press *and hold* to SEEK to next strongest station.

**PTY/CAT MENU:** Press to enter program type search. Press << or >> to navigate through program types. Press ENTER to select desired program type.

## CD/MP3 Player Controls

**VOLUME:** Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTER-CLOCKWISE to DECREASE (-) volume.

**MUTE/PLAY/PAUSE:** Press to PLAY or PAUSE current audio.

**RPT:** Press to REPEAT current playing track. Press to release function.

**INTRO SCAN:** Press when CD is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

**RDM:** Press when CD is playing to play each track in RANDOM order. Press again for NORMAL play.

**PTY/CAT MENU:** Press to access folder list. Press << or >> to navigate through folder. Press ENTER to select desired folder. Press << or >> to navigate through songs. Press ENTER to select desired song.



**EJECT:** Press to EJECT CD.

**TUNE/TRK:** Press to tune to next or previous track. Press *and hold* to FAST FORWARD or REWIND current track playing. Release for normal playback.

## Bluetooth®

**INCOMING/OUTGOING PHONE CALL:** Press to answer incoming call if Auto answer function is turned off. Press to end call. Press and hold to transfer an incoming call.

**MUTE/PLAY/PAUSE:** Press to PLAY or PAUSE current track.

**PAIRING A BLUETOOTH DEVICE:** With radio in BT Audio mode, choose "BT Pair" from radio menu and press ENTER button to prepare for incoming pairing signal from Bluetooth enabled device. When Bluetooth enabled device has completed its search, it will display the name of the radio (JHD3630BT) on the screen. Select "JHD3630BT" on your BT enabled device. The BT icon will appear on the radio LCD.



**TUNE/TRK:** Press to play previous or next track.

**INFO/ENTER:** Press to select "BT ON" or "BT OFF". When BT ON, press to turn BT Pair "ON" to put unit into pairing mode.

**PTY/CAT MENU:** Press & hold to access SYSTEM MENU. Press << or >> to navigate to Bluetooth Setup Menu option. Press ENTER to select.

## iPod® Controls\*

**VOLUME:** Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

**DISP/SCROLL:** Press to change display info between single and dual line text display. Press & hold to SCROLL Artist & Song Title info.



**MUTE/PLAY/PAUSE:** Press to PLAY or PAUSE current audio.

**RPT:** Press to REPEAT current playing track. Press to release function.

**INTRO SCAN:** Press when iPod is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

**RDM:** Press when iPod is playing to play each track in RANDOM order. Press again for NORMAL play.

**TUNE/TRK:** Press to play previous or next track. Press & hold to FAST FORWARD or REWIND current track playing. Release for normal playback.

**PTY/CAT MENU:** Press to enter playlist selection mode. Press << or >> to navigate through Playlists, Artists, Albums, Genres, Songs, Audiobooks & Podcasts. Press ENTER to select desired item. Press << or >> to navigate through selected item folder. Press ENTER to select desired song.

## USB Controls

**VOLUME:** Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

**MUTE/PLAY/PAUSE:** Press to PLAY or PAUSE current audio.

**RPT:** Press to REPEAT current playing track. Press to release function.

**INTRO SCAN:** Press when album/folder is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

**RDM:** Press when album/folder is playing to play each track in RANDOM order. Press again for NORMAL play.

**USB:** Insert USB device here.



**TUNE/TRK:** Press to tune to next or previous track. Press & hold to FAST FORWARD or REWIND current track playing. Release for normal playback.

**PTY/CAT MENU:** Press to access folder list. Press << or >> to navigate through folder. Press ENTER to select desired folder. Press << or >> to navigate through songs. Press ENTER to select desired song.

## SiriusXM® Radio Controls\*

**BAND:** Press to select preset group SR1, SR2, or SR3 each with 6 channel memory locations.

**AS/PS:** Press to scan through currently stored presets.

**DISP/SCROLL:** Press to change display info between single and dual line text display. Press & hold to SCROLL artist & song title info.

**VOLUME:** Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

**MUTE:** Press to MUTE audio.

**STATION STORE BUTTONS:** Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 18 channels (6 channels per band SR1, SR2, SR3).

**PTY/CAT MENU:** Press to enter category list mode. Press CAT- to go DOWN a category or CAT+ to go UP a category. Press << or >> to navigate through category list. Press DISP/SCROLL to navigate through Channel Name, Artist & Song Title information. Press ENTER to select desired song in category.



**TUNE/SEEK:** Press >> to tune UP a channel or << to tune DOWN a channel. Press & hold to fast search.

**INFO/ENTER:** Press & hold to directly enter station number. Press << or >> to change number. Press again to select desired number.

NOTE: Requires SiriusXM® tuner & antenna. Sold separately.

## Activating your SiriusXM® Subscription

Before you can listen to SiriusXM Satellite Radio, you must subscribe to the service and purchase an optional SiriusXM Connect Tuner.

- With the radio power ON, press the MODE button to enter SiriusXM Ready mode. After displaying the SiriusXM logo, the Receiver may update the SiriusXM software.  
NOTE: Don't push any buttons or perform any operations until updating has been completed.
- Once the update is complete, the display will change to "Call 1-866-635-2349 to Subscribe" and will show the Preview Channel on channel 1. You will not be able to tune to any other SiriusXM Radio channels until you activate your subscription.

- You will need to access your SiriusXM Radio ID, which is displayed on channel 000. Press and hold the INFO/ENTER button on the radio to enter Direct Tuning mode. Press << or >> to select digits 000. Press ENTER to make your selection. This will display your unit's unique 8-digit Sirius Radio ID.
- Write the Radio ID number down and have your credit card handy.
- To Activate a SiriusXM subscription, go to [www.siriusxm.com/activatenow](http://www.siriusxm.com/activatenow) or call 1-866-635-2349.
- To activate SiriusXM Canada service go to [www.xradio.ca](http://www.xradio.ca) and click on "ACTIVATE RADIO" in the top right corner, or call 1-877-438-9677.