


**MSR2007/2107 COMMANDER MOUNTING TEMPLATE**

7/8" HOLE REQUIRED  
FOR CABLE

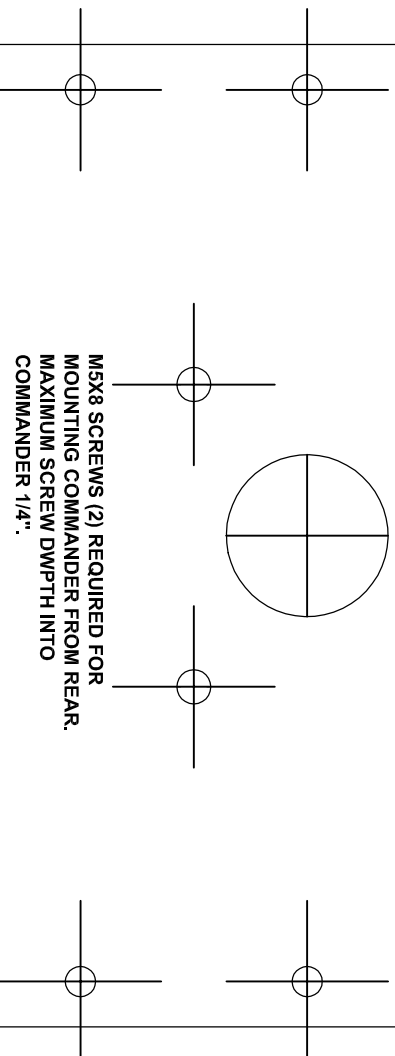

**M5X8 SCREWS (2) REQUIRED FOR  
MOUNTING COMMANDER FROM REAR.  
MAXIMUM SCREW DWPTH INTO  
COMMANDER 1/4"**

**M4 MOUNTING SCREWS (4-PCS)  
MINIMUM SCREW LENGTH 1 1/2"**

**\*\*\*Note: Verify Hole Location Before Drilling!**